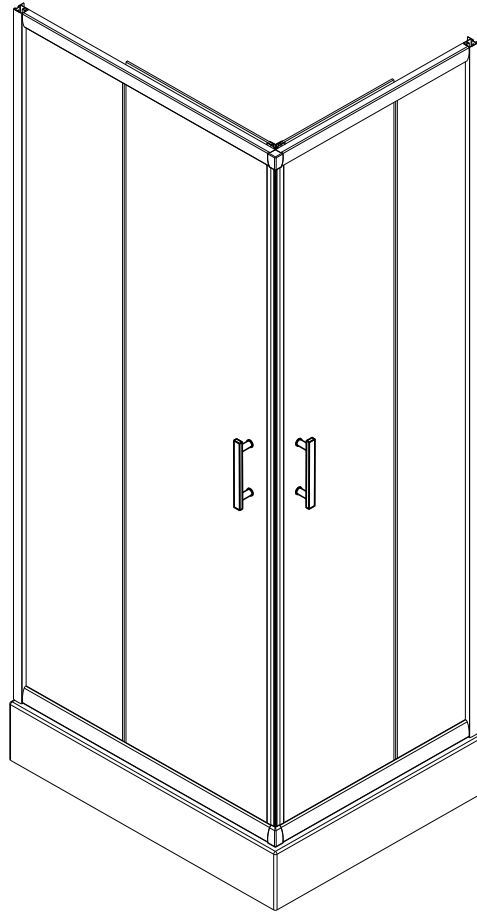
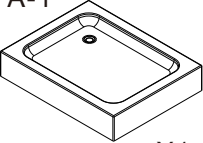
 

 



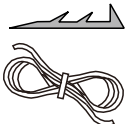
 

 

 
 
 










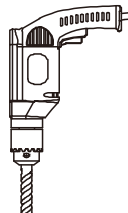



Installation instructions

ZQ121G/ZQ121B-L/R



<p>A-1</p>  <p>X1</p>	<p>A-2</p>  <p>X2</p>	<p>A-3</p>  <p>X4</p>	<p>A-4</p> 	<p>A-5</p> 	<p>A-6</p>  <p>X2</p>	<p>A-7</p>  <p>X2</p>	
<p>A-8</p>  <p>X2</p>	<p>A-9</p>  <p>X4</p>	<p>A-10</p>  <p>X8</p>	<p>A-11</p>  <p>X4</p>	<p>A-12</p>  <p>X4</p>	<p>A-13</p>  <p>X2</p>	<p>A-14</p>  <p>X2</p>	
<p>A-15</p> 	 <p>M4*25=8</p>	 <p>M4*16=8</p>	 <p>M4*14=4</p>	 <p>M4*10=8</p>			
							 <p>SLICON</p>

